

Digital Picture Frame

User Operation Guide





Preface

Congratulations on your purchase of this digital photo frame.

Before operating the unit, please read this manual carefully, and retain it for future reference.

This manual will help you use the many exciting and useful features that will make your photo frame viewing more enjoyable. It includes a step by step guide to the basics on photo frame operation including instructions on uploading and playing photos, music or video. You will also be able to create a slideshow using multiple transition effects or display one picture at a time.



Contents:

1,ATTENTION

2,Main feature

3,Specification

4,Main parts introduction

5,Unit assembly

6,Operation

 Main menu description

 Movie playing

 Music playing

 Photo playing

 Photo with music playing

 Copy files from one to another memory card.

 Delete files from one memory card

7,Calendar

8,Warranty and after service

9,Trouble shooting



■ **ATTENTION:**

- 1, Please don't touch the adaptor with wet hand.
 - ✓ Maybe cause electric shock.
 - ✓ Don't use the device in snow or raining place.
 - ✓ Don't wet the adaptor
- 2, Put the device away from children.
- 3, The device can't hang on the wall.
- 4, Don't insert any foreign matter in the device, such as chopstick, needle, pencil, knife.
- 5, Please don't analyse, repair or change the device.
- 6, If you exert an academic pressure on the device, it may damage the parts where the stander connect the LCD.
- 7, Please use the USB cable and adaptor which we provided only.
- 8, Don't drag the adaptor line or any heavy things press the line.
- 9, Don't use the damaged plug.
- 10, Turn off the device when you are going to move it.
- 11, Don't put the adaptor with appliance which can be easily getting calorifacient.
- 12, Don't put the device in oil, mist, moisture and easily wringing place.
- 13, please don't put the device under 0°C or sunlight directly point-blank.
- 14, please take off the plug when thundering.

■ *Main Features*

① Photo viewer

Supports jpeg images up to 15 Mega Pixels.

Display digital picture in Hi-resolution and great quality

Create an automatic slide show with multiple transition effects and optional background music.

New auto-rotate feature shifts photos when frame is turned vertical.

② Music player:

Plays mp3 music with the integrated stereo speakers. Support MP3, WMA format.

③ Video player:

Plays AVI, mpeg1, mpeg2 and mpeg4 movie files stored on supported memory cards.

④ Memory card supported:

Accepts many memory cards including CF, SD, MMC, MS, XD cards, Compact Flash as well as USB flash drives.

⑤ New Calendar mode with photo slideshow and alarm.

⑥ User friendly on screen display lets you easily access all features.

Includes a credit card sized remote control.

⑦ Can support built in 128mb-2GB memory. Can easily copy or delete files from one card to other memory card.

⑧ With 2 kind USB slot, which is easily connect all kinds of stander memory device or digital camera.

⑨ Personal design:

Can directly connect the device with PC for copy, delete files as you want.

■ *Specification:*


 
Panel	Hi resolution digital panel
size	7 inch
Resolution	800*480
Brightness	300m2
View angel	horizontal170°,vertical170°
Audio out	Stereo
Video function	Support avi,mpeg1,2,4
photo format	jpeg
Music format	Mp3,WMA
Memory card	CF、MD、SD、MMC、SM、MS、XD
Operation way	Remote control,key-press
Material	ABS
Assessories	Adaptor,remote control>manual,USB cable,warranty card,
Power supply	AC 100-240V 12V 1.5A
power	18 W
Operation temperature	0-45°C

Main parts introduction:

Make sure they are included in the box when you open the package.


- ①7 inch digital photo frame ②remote control ③adaptor ④manual
 ⑤warranty card ⑥USB cable



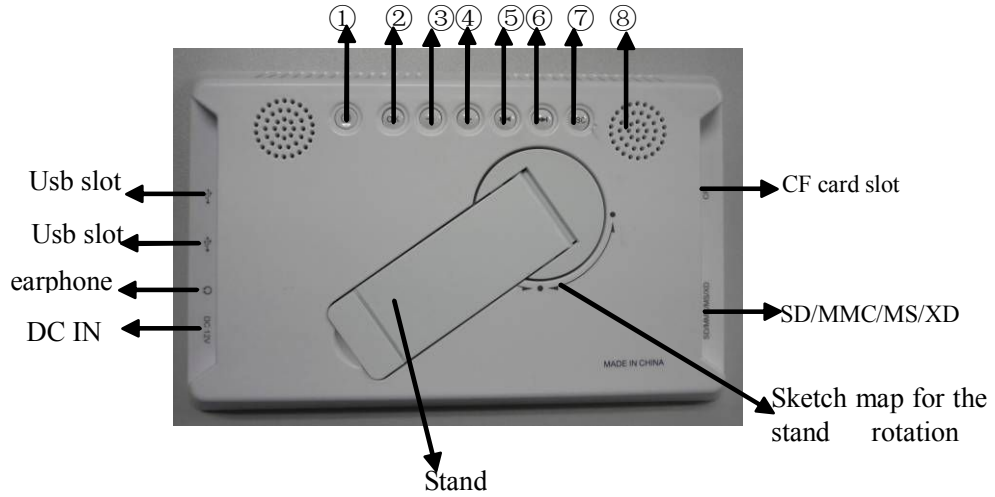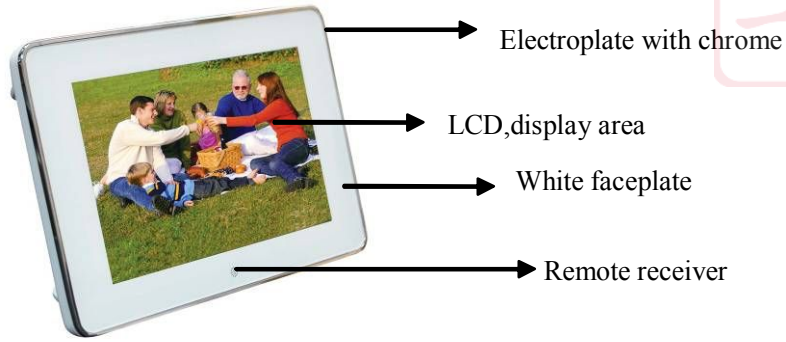

- ① power ON/OFF
- ② ENTER
- ③ Volume-
- ④ Volume+
- ⑤ left
- ⑥ right
- ⑦ exit
- ⑧ speaker

Remote Control:

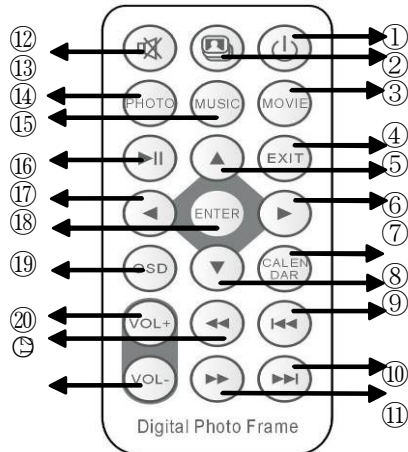

①	Power on/off.
②	Slideshow with background music Mute, but it can not work in the system setup state.
③	Movie playing
④	exit
⑤	up
⑥	right
⑦	calendar
⑧	down
⑨	previous
⑩	next
⑪	Play or pause file In the movie playing state, choose to fast foward
⑫	mute
⑬	Photo playing
⑭	Mp3 playing
⑮	Play/pause
⑯	left
⑰	enter
⑱	information
⑲	Volume +
⑳	Play or pause file In the movie playing state, choose to fade back

■ Unit Assembly

- 1, Open the package and remove the foam packing.
 - 2, Remove the photo frame from its protective sleeve.
 - 3, Install the digital photo frame stand at the rear of the unit. The stand can be mounted horizontally or vertically for portrait display.
- ✓ connect adaptor with the device.



- ✓ insert memory card, CF card



- ✓ Insert SD card




- ✓ Insert USB flash



■ *Operation*

❖ *Main menu description:*

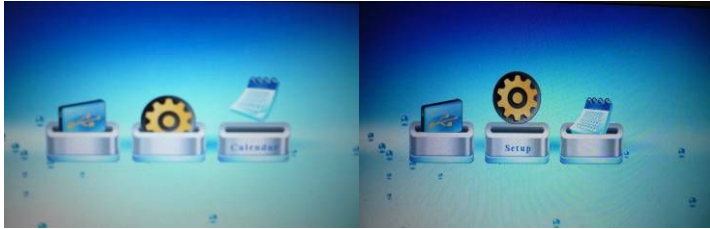

1, Now you can select NAND (or SD/MMC/CF/MS/XD/USB flash if they are inserted)

NAND: play files inside the built-in memory.



Setup: setting the device.



Calendar: view calendar/alarm with photo browser



*If you choose NAND, Press ENTER, it will comes below picture.
Movie: play video files*



Music: to play music like mp3, wma format.



Photo: to view photo, support JPEG format.



File: to view all files, photo, mp3, video files. You can copy or delete files here.




❖ *Movie playing:*

The digital picture frame supports the following video formats: Motion JPEG (avi format used by most digital cameras), MPEG-1, MPEG-2, MPEG-4.

Press enter at below picture menu.




A list of all movie files will be listed on the left side of the screen. The right side consists of the movie preview window and information display of the current movie. Use UP/ DOWN arrows to select and press ENTER to play.

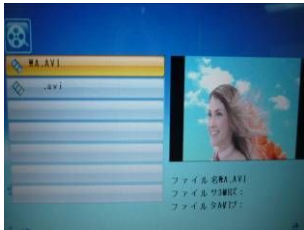

Choose the file you want to play by UP DOWN bottom in the remote control. And you can use the bottom on the back shell also. Then press enter.. It starts to play the movie.



When the device is playing movie, if you choose OSD bottom on the remote control .Below picture menu will showed on the display.

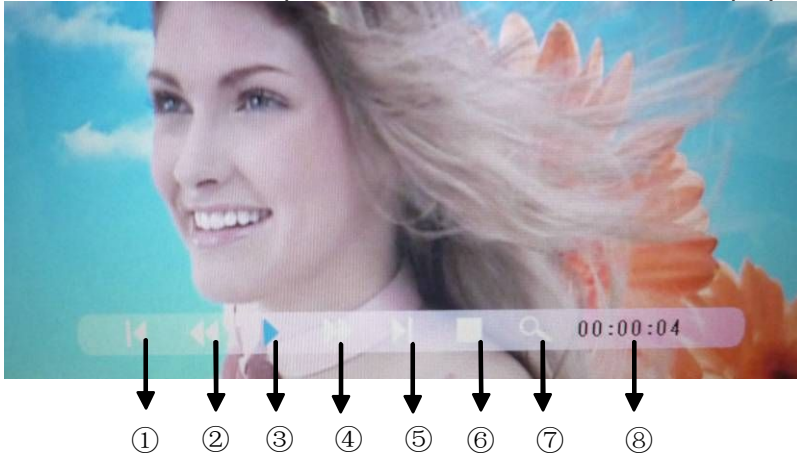

- ①exit to play precious video file.
- ②fast reverse,the device can play 2/3./4times fast reverse for the movie playing.
- ③play/pause
- ④fast forward,the device can play 2/3./4times speed for the movie playing.
- ⑤next: to play next video file.
- ⑥pause:stop playing movie back to the listed video file.
- ⑦ enlarge the picture 2/3/4 times when playing movie.
- ⑧showed the playing time。

❖ *MUSIC Playing*

Press enter at below picture menu.



A list of music files will be listed on the left side of the screen. The right side will show the frequency chart and information status bar. The song information will display below the status bar. Use the UP/DOWN arrows to select the music file and press ENTER to play.




❖ *PHOTO playing:*

Press enter at below picture menu



It will showed a photograph breviary like this

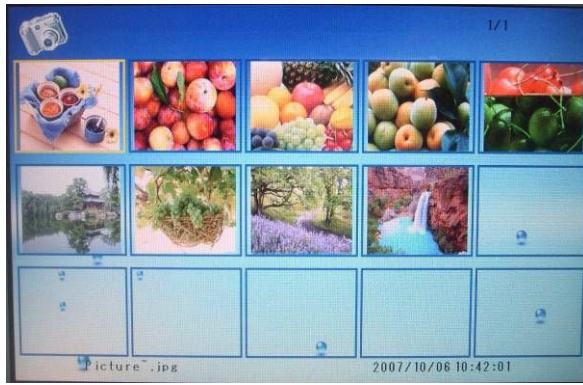

When the desired photo is highlighted, press ENTER to view it in full screen. The photo will show up in full screen and remain still in pause mode. Press PLAY to begin slideshow mode. While a slideshow is playing or a picture is on display, press the OSD button. The following display menu will appear.



- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

- ①exit to play previous photo.
- ②play/pause
- ③next:to play next photo
- ④rotate:rotate the photo at 90°180°360°
- ⑤stop: back to the photograph breviary.
- ⑥enlarge,enlarge the photo at 2/4/8/16 times

❖ *Photo with music as background.*

Make sure there have jpeg and MP3/WMA files inside the memory.




Press , then you can browsing photo with music as background.

❖ *File arrangement*






Now you can choose the file press enter, it starts playing. Also you can copy or delete files here.

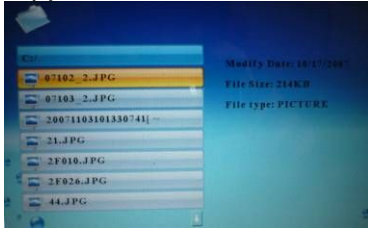



✓ *Copy files in the file list screen*

If the user wants to do copy, press the MENU button to select FILE icon. When the sub-menu is on, use the UP/DOWN cursor to select the file and press the RIGHT button to confirm the selection, then press the OSD button, the screen will show user COPY/ DELETE information in the right. Use the UP/DOWN cursor to select COPY and press ENTER to confirm, then user also use the UP/DOWN cursor to select the device that you want to store the copy file. After copying it, it will show "Finished". Press the ENTER to turn off the submenu and go back to the file list.

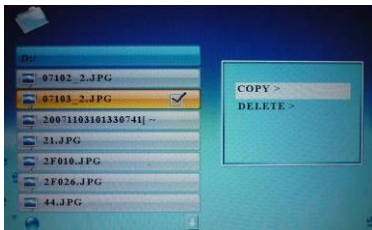

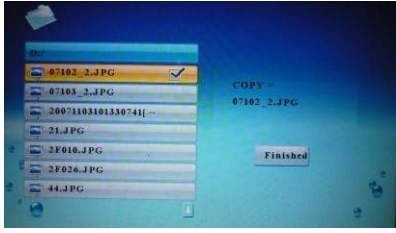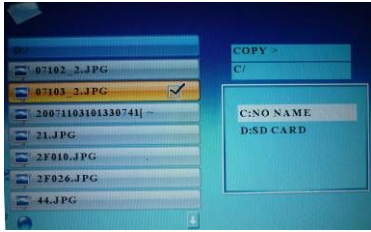

✓ Delete files from listed file.

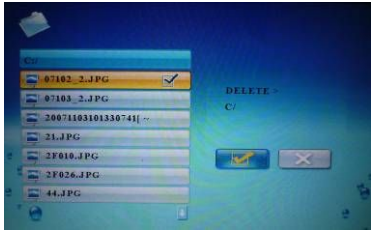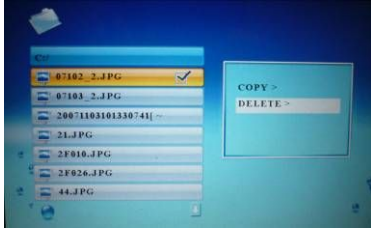

■ SET UP:

Many of the picture frame functions can be adjusted to your preference. By using the SETUP option from the main menu, the following changes can be made: use the ENTER button and UP/DOWN arrows to change the options.

If you choose setup, it comes to below picture menu.

Language: use the right key to choose the language between English/French/Italy/German/Spanish/Chinese.



Slideshow time: use right key on the remote control to choose slideshow interval time as 3S/5S/15S/1MIN/15MIN/1HOUR.



Slideshow mode: use right key on the remote control to choose slideshow mode as random/Fading/Off/bottom to top/top to bottom/left to right/right to left/door to close/door to open/hori-cross/Verti-cross/




Serarate windows: use right key on the remote control to choose seratate windows on/off




Music repeat mode: use right key on the remote control to choose repeat off/ repeat all/repeat one



Movie repeat mode:use right key on the remote control to choose movie repeat mode as repeat all/repeat all/repeat one

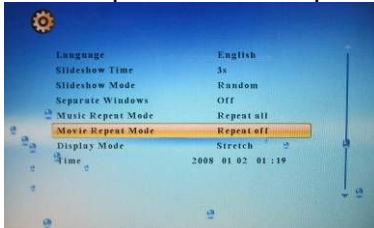

Display mode:use right key on the remote control to choose display mode as stretch/cinema/crop/

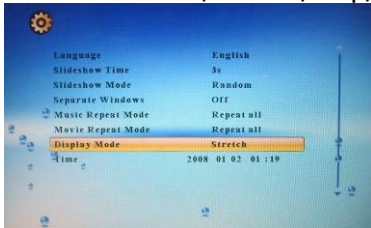


Time: use the right key on the remote control to set the right year/month/day/ time




Alarm: use right/left/right/left key on the remote control to set Alarm Time/Alarm Music/ Alarm On/Off



Brightness: use up/down key on the remote control to set brightness from 0-16

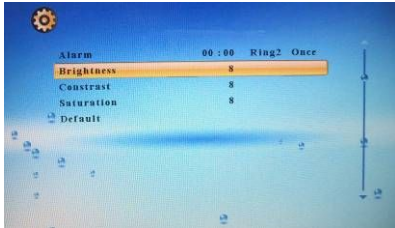

Constrast: use up/down key on the remote control to set constrast from 0-16

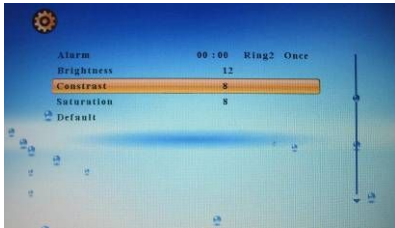

Saturation: use up/down key on the remote control to set saturation from 0-16



Default:Return to factory default setup



■ *Calendar and Clock Display*

From the main MENU screen, select Calendar/clock and press ENTER, the Calendar/ Clock screen will display. If the Alarm is turned on, it will also show the alarm time. A picture slideshow will begin at the picture at the picture preview window at the right part of the screen.



■ *Warranty and after service:*

Letter of guarantee

the letter of guarantee must included in the package, make sure write down the purchasing date with stamp. The letter of guarantee only issue one time only, so please take care of it cautious.

1, this letter of guarantee only work for those right according the use manual operation, and within our guarantee period.

2, You have to pay for the repair for below conditions:

① Wrong using or informality repair, change.

② trouble caused by move or fall off

③ use wrong adaptor connect the device.

④ damaged by thunder, fire, earthquake, typhoon, flood.

⑤ without purchasing date and stamp for the guarantee card from the shop. Or forge copied guarantee card.

⑥ Guarantee card available in Japan only.

(Please do take a look at above information before you apply for repairation)

Please read below trouble shotting, if the trouble still can't solve, you can make a phone call to our service center.

■ *Trouble shooting*

problems	resolvent
No electricity	Make sure the adaptor is right connected
No menu when turn on the device	Make sure the memory card is the right type , this device only work on XD/MMC/SD/CF and USB. Make sure your memory card in well conditioned. Make sure the adaptor well connected. Make sure the file format are supported by the device.
Stop Off	If it stopped when the device is actioning, please stop everything, just wait 30 second to 1 Min. The device will work slowly for the bigger files,if it can't work, just check the adaptor and memory card are well connected, and you can turn off and restart the device.
Can't connect with PC,O pc can't read the device when connected	Make sure adaptor is well connected. Make sure the device is power on Make sure the pc system is Windows2000/Windows XP/Windows Vista, /MacOS9.2.2
photo slide show time is too long	Setup ==>photo sideshow time==>choose the interval time you need.
No voice	Press MUTE bottom on the remote control, then adjust volume + or -

Remote control can't work	Check if the battery inside is well conditioned. Check if there any liquid damaged the remote control. Other wise you have to purchase new remote control, You can contact the shop where you brought or the service center
Can't read video file	Due to there have deviation for video format,the device can't read the video files form some CD writer,as this device not for all video format. So please use the format we mentioned above.
Press menu bottom nothing happens	The device will come to slowly for some photo files. To the best quality photo viewer.